

CNV-DMXR2

目录

	1
1	3
1.1	3
1.2	3
1.3	3
2.	2
2.1	2
2.2	2
3.	3
3.1	3
3.2	3
4.	4
4.1	4
5.	5
5.1	5
5.1.1	USB	5
5.1.2	7
6.	7
6.1	7
6.2	8

6.3	/	9
6.4	/	10
6.5		10
6.6		11
6.7	DMX512	12
6.8	DMX512	12
6.9		13
6.10		14
6.11	DMX512	15

1

1.1

CNV-DMXR2

1.2

DMX512

(USITT)

CNV-DMXR2

DMX512

0-10V

RDM

CNV-DMXR 2

1.3

DMX (Digital Multiple X)

DMX512: **512**

RDM (Remote Device Management)

DMX512-A

CNV-DMXR2 **DMX512**

0-10V

2.

2.1

2.2

- 1.
- 2.
- 3.
4. DMX512
5. DMX512
- 6.

3.

3.1

1GHz 32

512Mb RAM

20GB

UTEK UT890

CNV-DMXR 2

3.2

Windows

5.


5.1


5.1.1 USB

1. USB_MCom.rar
2. USB_MCom.exe
- 3.



4.4.1.1 USB

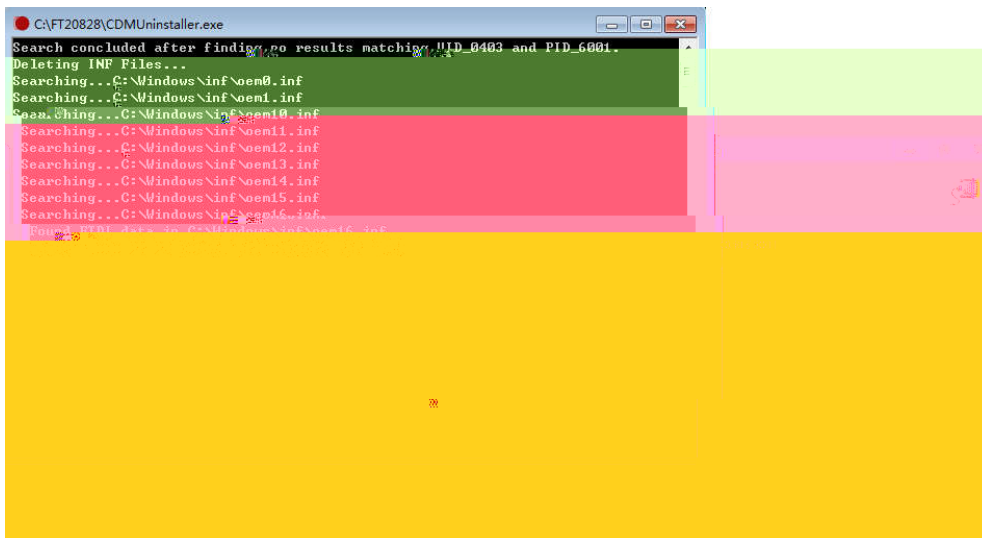

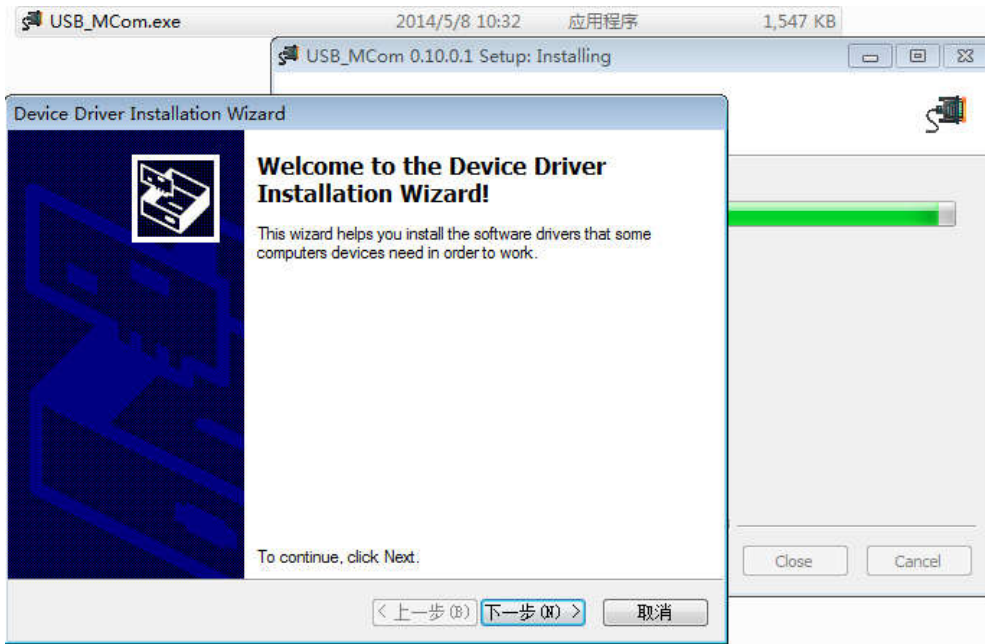

5.1.2

1.



2. PC Microsoft .NET Framework 4.0

<https://www.microsoft.com/zh-cn/download/details.aspx?id=17718>

6.

6.1



6.2

COMx x

USB


Port

6.3 /

- 1 Read Settings ()
- 2 CNV-DMXR2

6.4 /

- 1 /
- 2 Write Settings ()
- 3

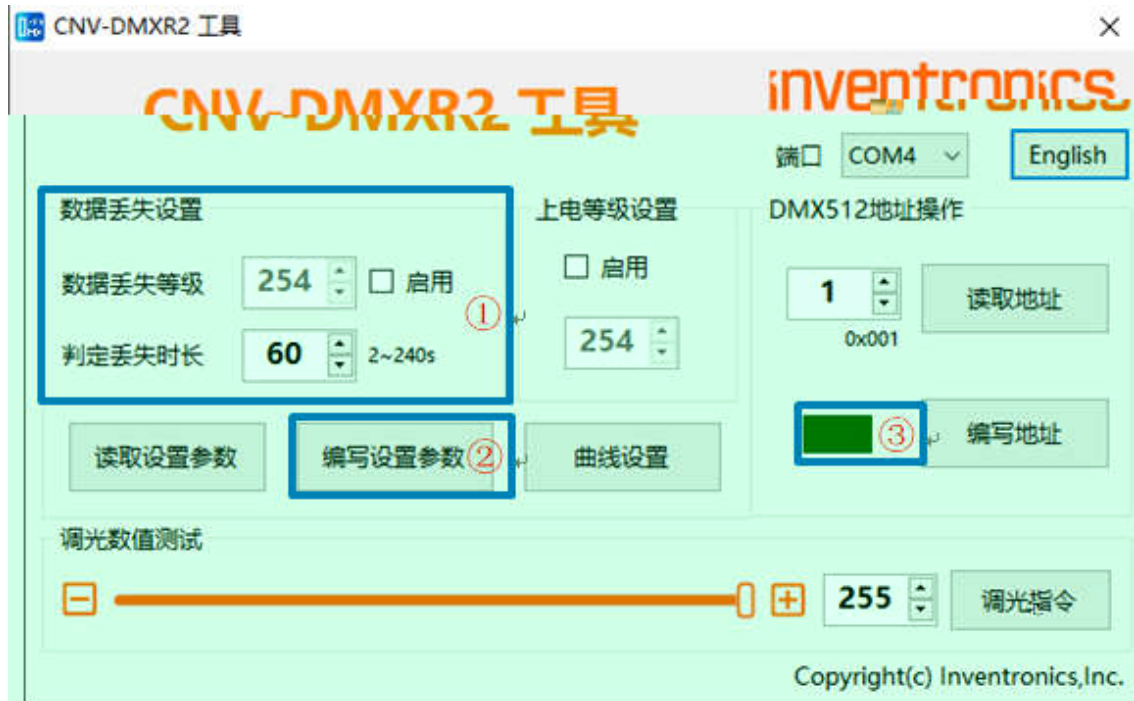

6.5

- 1 Read Settings ()
- 2 CNV-DMXR 2
- 3

6.6

1

2 Write Settings (

6.7 DMX512

- 1 Read Address ()
- 2 CNV-DMXR2
- 3




6.8 DMX512

- 1 DMX512
- 2 Write Address ()
- 3



6.9


- 1 Curve Setting
- 2 Read Settings
- 3
- 4

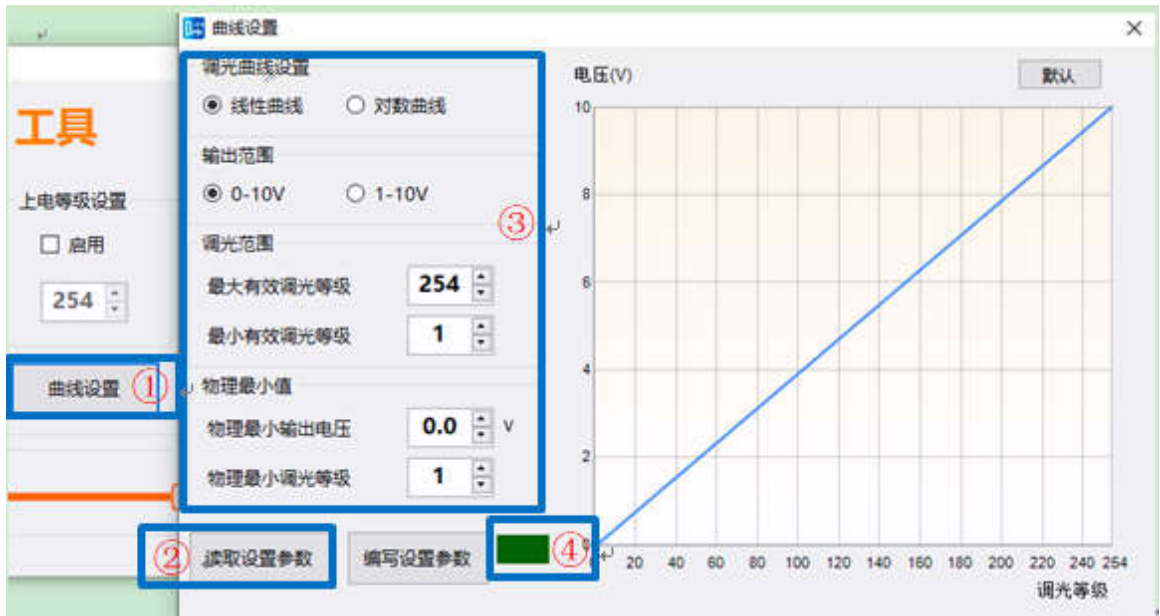

6.10

- 1 Curve Setting
- 2
- 3 Write Settings
- 4.

Default

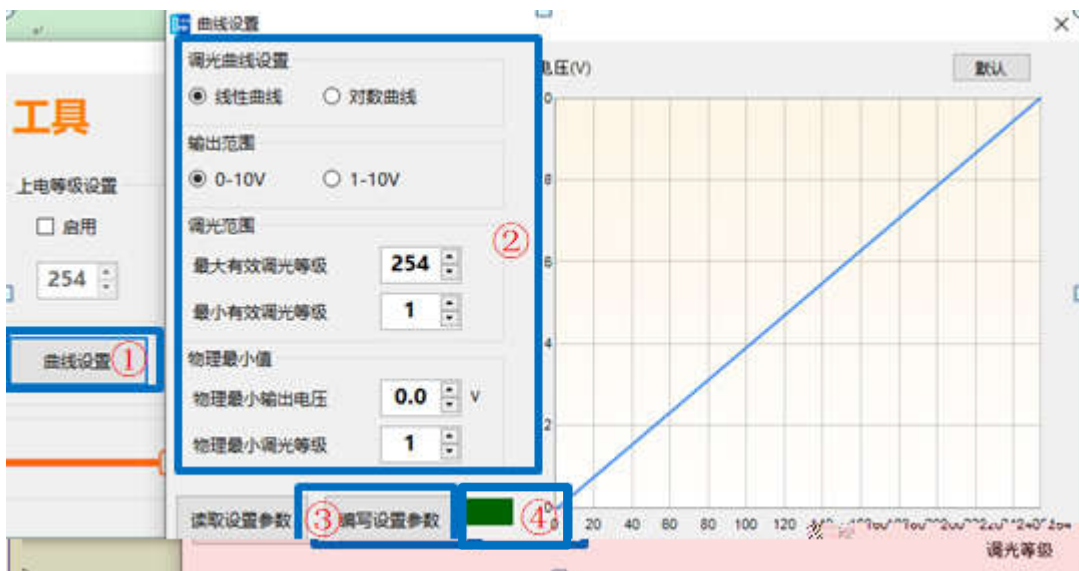

6.11 DMX512

1

2

3 Dimming()

4

1 512 ()

() 0

2 CNV-DMXR 2

DMX512

[6.7 DMX512](#)

